


NOTE: Shelves may need to be removed in order to install screws

VISION MODULAR

INSTALLATION OF A BENCH HEIGHT MODULAR TOP

Recommended Tools

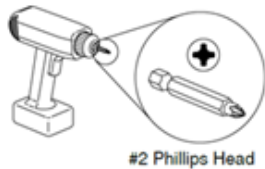

#2 Phillips Head

Hardware Needed



#8 x 1-1/4" PHP Screw

Failure to comply with installation instructions will compromise the safety, durability and performance of this product, which may risk injury to the user of this product and/or diminish the product life cycle. Jasper Group assumes no liability in these instances.

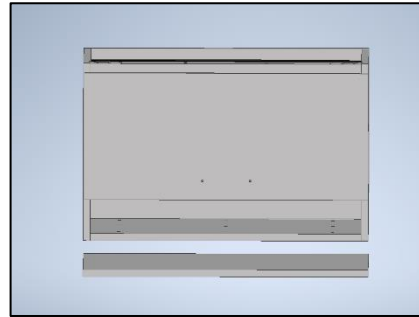


Figure 1



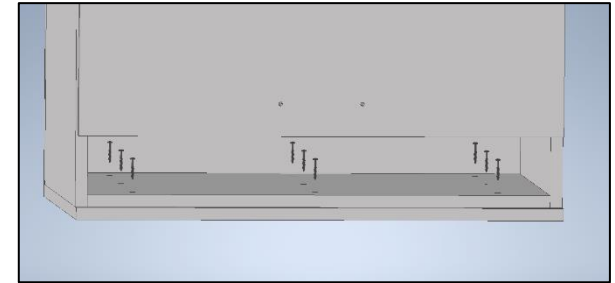


Figure 2

1. Lay the top upside down on a nonmarring surface (Figure 1)
2. Position and secure the unit so that the top is flush along the sides using the screws provided. The screws go in the predrilled holes (Figure 2)

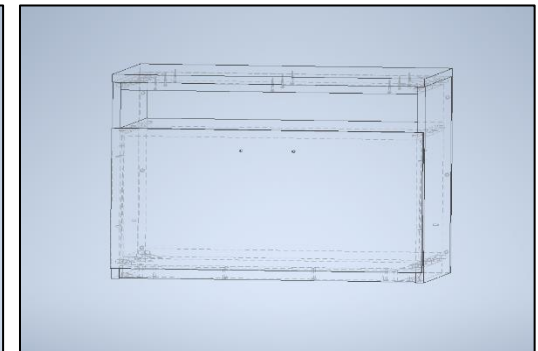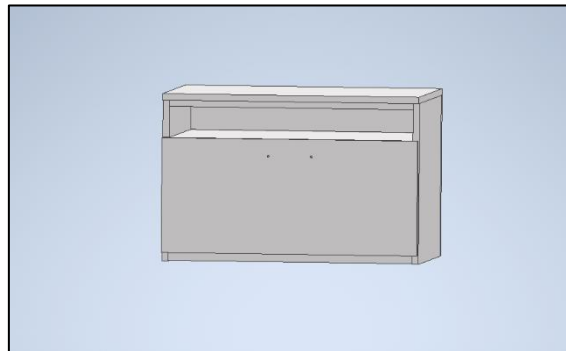

Finished Product